

sector 111

hub50mm Installation Instructions

Rev. A

Page 1 of 3

READ FITTING INSTRUCTIONS IN FULL BEFORE INSTALLATION

This article is sold without warranty expressed or implied. No warranty or representation is made as to this product's ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED, and/or MAINTAINED. THE USER ASSUMES THE RISK.

By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these SECTOR 111 products from SECTOR 111, its affiliates, distributors, and agents (collectively, SECTOR 111) **as is** and **with all faults**.

The entire risk as to the quality and performance of these SECTOR 111 parts is with the purchasers. Working on your car can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or Safety critical work to a skilled mechanic.

We take no responsibility for the incorrect use and/or installation of SECTOR 111 products.

1. Disconnect
Battery

- 10mm Wrench

- a. Locate battery in trunk.
- b. Remove plastic battery cover.
- c. Disconnect positive and negative battery terminals.



Assembly Step

Tools/ Parts

Detailed Instructions

Picture

2. Remove Air Bag


- Flat Head Screwdriver
- 5mm Allen Wrench

- a. Make sure wheels are straight forward.
- b. Remove two 5mm Allen bolts located on the sides of the OEM steering wheel.
- c. Pull the airbag assembly from out of the center of the OEM steering wheel.

- d. Use a flat head screwdriver to remove the green safety clip located on the back of the airbag assembly.
- e. Pull SRS plug from airbag assembly.
- f. Pull horn plug from steering wheel harness.



hub50mm Installation Instructions			Rev. A	Page 3 of 3
Assembly Step	Tools/ Parts	Detailed Instructions	Picture	

3. Remove Factory Steering Wheel	<ul style="list-style-type: none"> • 5mm Allen Wrench 	<ol style="list-style-type: none"> Remove (4) 5mm Allen bolts located inside center of OEM steering wheel. Pull wheel off from steering column. 		
4. Install Hub Adapter	<ul style="list-style-type: none"> • 50mm Hub Adapter • 5mm Allen Socket • Extension • Torque Wrench 	<ol style="list-style-type: none"> Align 50mm hub and put in the 4-5mm bolts. Torque bolts in a cross pattern ~25ft-lbs 		
5. Install Steering Wheel of Choice	<ul style="list-style-type: none"> • Steering Wheel of Choice (Personal F1 Wheel Pictured) 	<ol style="list-style-type: none"> Take the 6 bolt steering wheel of your choice and bolt it to the hub50mm (Personal F1 Steering Wheel Pictured) Torque down bolts in a star pattern to ~15ft. lbs. 		