

sector 111

Zoom CF Mirror Installation

Rev. A

Page 1 of 4

Assembly Step

Tools/ Parts

Detailed Instructions

Picture/ Illustration

READ FITTING INSTRUCTIONS IN FULL BEFORE INSTALLATION

This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED, and/or MAINTAINED. THE USER ASSUMES THE RISK.

By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these SECTOR 111 products from SECTOR 111, its affiliates, distributors, and agents (collectively, SECTOR 111) **as is** and **with all faults**.

The entire risk as to the quality and performance of these SECTOR 111 parts is with the purchasers. Working on your car can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or Safety critical work to a skilled mechanic.


We take no responsibility for the incorrect use and/or installation of SECTOR 111 products.


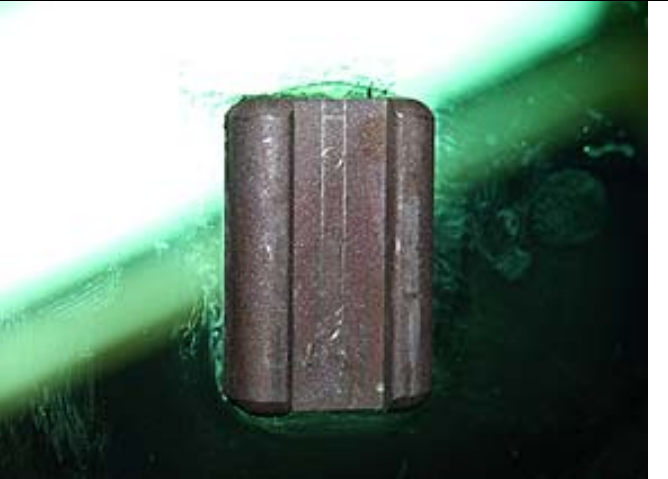
1. Remove Stock Mirror

- Paint Lid Removal Tool


- a. To remove the existing mirror, carefully compress the retaining clip and slide the mirror towards the front of the car. To get to the retaining clip you will need to push the plastic trim piece on the mirror down. Retaining clip is labeled by the **RED** arrow in the first picture.

***NOTE:** Use caution when removing mirror. It is important to slide the mirror clip towards the

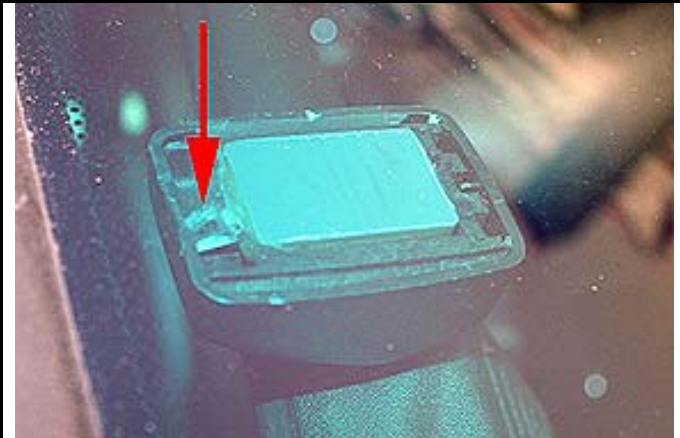

Assembly Step	Tools/ Parts	Detailed Instructions	Picture/ Illustration
		<p><i>front of the car, keeping it parallel to the windshield. Pulling downward or at any angle could result in cracking the windshield.</i></p>	
2. Install Zoom Mirror	<ul style="list-style-type: none">• Small Allen Wrench (supplied)	<ol style="list-style-type: none">Once the stock mirror is removed, you will be left with a bare cleat as shown in the first picture.Slide Zoom CF Mirror from the bottom of the cleat in an upwards motion towards the rear of the car.Once it is all the way back, tighten the set screw with the small allen wrench supplied.	

Assembly Step	Tools/ Parts	Detailed Instructions	Picture/ Illustration
---------------	--------------	-----------------------	-----------------------

			
--	--	--	--

Assembly Step	Tools/ Parts	Detailed Instructions	Picture/ Illustration
3. Comments	<ul style="list-style-type: none">• Large Allen Wrench (supplied)	<ol style="list-style-type: none">a. On top of the mirror are two allen head screws that can be tightened or loosened to adjust the firmness of the mirror if necessary.b. Enjoy your new Zoom CF Mirror from Sector111!	