

READ FITTING INSTRUCTIONS IN FULL BEFORE INSTALLATION

This article is sold without warranty expressed or implied. No warranty or representation is made as to this product's ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED, and/or MAINTAINED. THE USER ASSUMES THE RISK.

By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these SECTOR 111 products from SECTOR 111, its affiliates, distributors, and agents (collectively, SECTOR 111) **as is** and **with all faults**.

The entire risk as to the quality and performance of these SECTOR 111 parts is with the purchasers. Working on your car can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or Safety critical work to a skilled mechanic.


We take no responsibility for the incorrect use and/or installation of SECTOR 111 products.

Make sure your kit contains the following:

- 1 Boomerang rear tow hook

Tools needed for install:

- 5mm Allen wrench
OR
- 13mm socket (this is due to different bolts between models)
- Ratchet
- Torque wrench

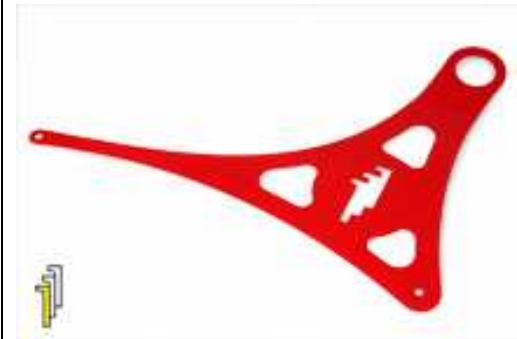

Instructions**Tools/ Parts****Picture/ Illustration**

1. Remove the two center diffuser bolts

- 5mm Allen
- 13mm socket



2. Place Boomerang tow hook in place and reinsert bolts

- If your diffuser has recessed bolt holes like in the picture use washers to space for flush tow hook mounting

3. Tighten bolts to 18 ft-lbs



Instructions**Tools/ Parts****Picture/ Illustration**

4. Recheck Torque after 100 miles
5. Please check torque before every track day
6. Try not to use tow hook too soon!! ☺

